

## Accessories for R-2000 Surface Roughness Tester



## Accessories for R-2000 Surface Roughness Tester

- R2000-0001 Standard Stylus.
- R2000-0002 Groove Stylus, Especially used to measure surface roughness of deep groove or step below 10mm. The other function is similar as R2000-0001. Need to be used with R2000-0007 stand for the roughness tester.
- R2000-0003 Curvature Probe, is designed to test surface roughness for convex and concave surfaces. Minimum bore diameter is 9mm as well as maximum bore depth is 22mm. The other function is similar as R2000-0001. Need to be used with R2000-0007.
- R2000-0004 Extension Rod.
- R2000-0005 Standard Sample Plate.
- R2000-0006 Cable and Software for RS232C/USB.
- R2000-0007 Stand for the roughness tester.
- R2000-0008 Bluetooth Interface.